



3D


3D

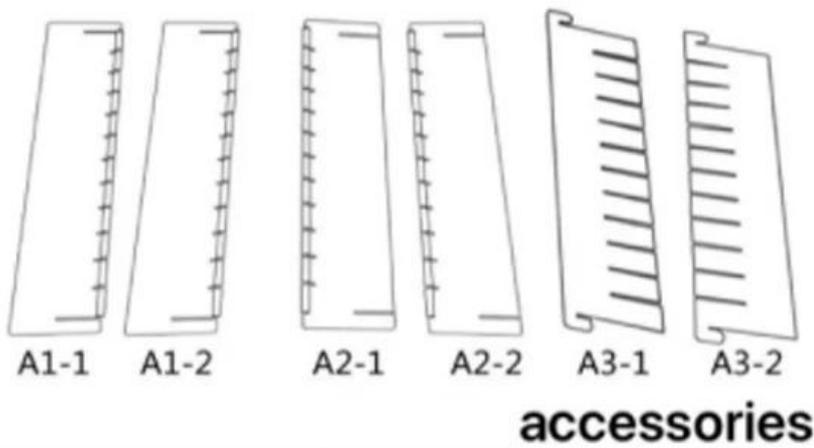


Installation Instructions

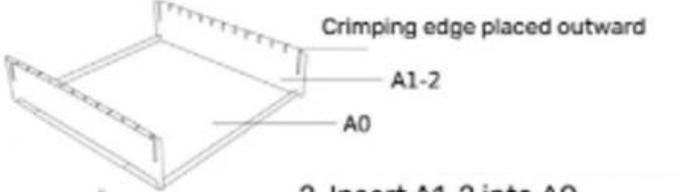

2. Insert A1-2 into A0

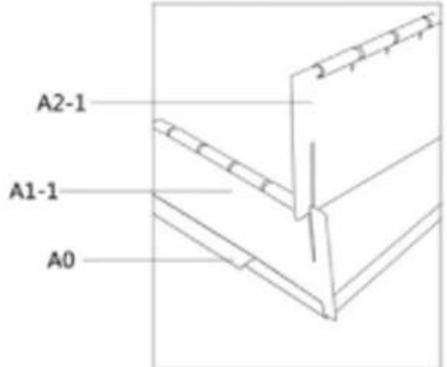




3. Insert A2-1 into A1-1's groove (illustrated above)


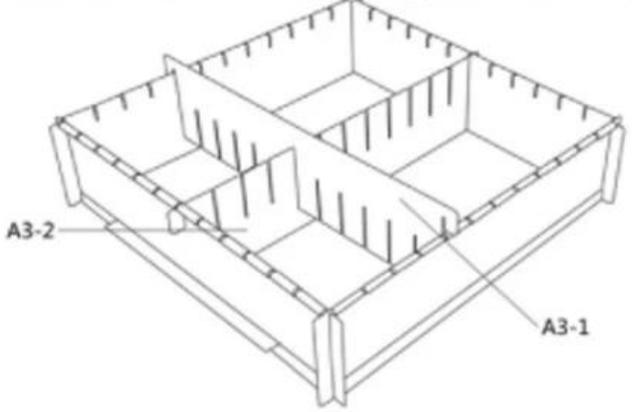


□□□□□□□□	□□□□□mm	□□□mm	□□□g	□□
8□□□	203 * 203mm	75mm	560g	1.2mm□□□□□□□□1.5mm
10□□□	254 * 254mm	80mm	800g	1.2mm□□□□□□□□1.5mm
12□□□	305 * 305mm	80mm	1000g	1.2mm□□□□□□□□1.5mm







□□□□□□□□

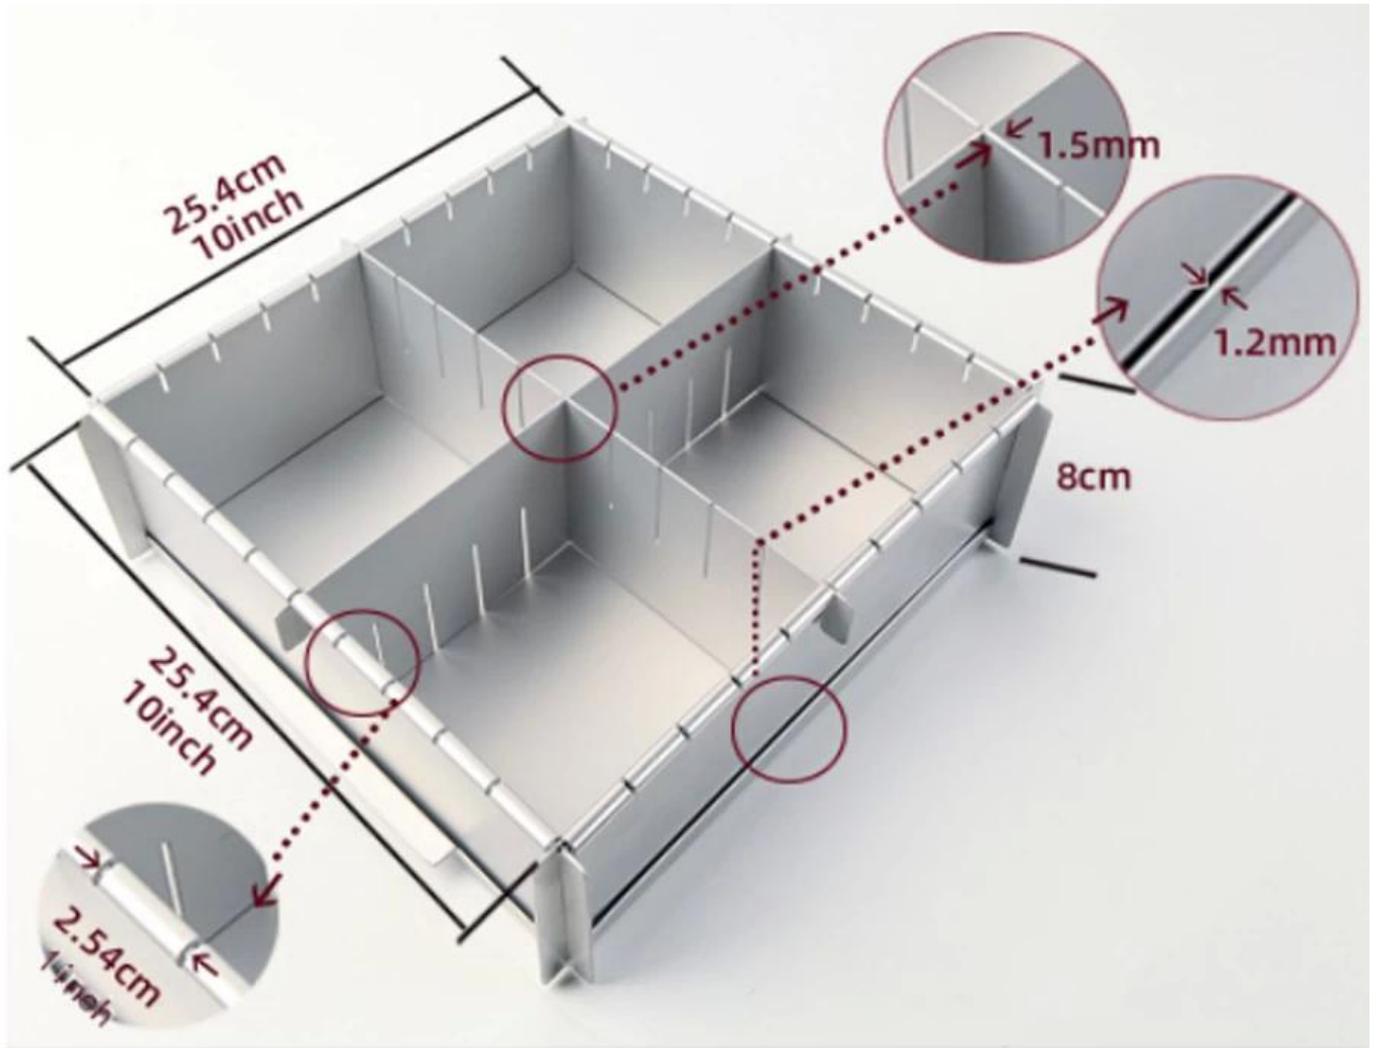

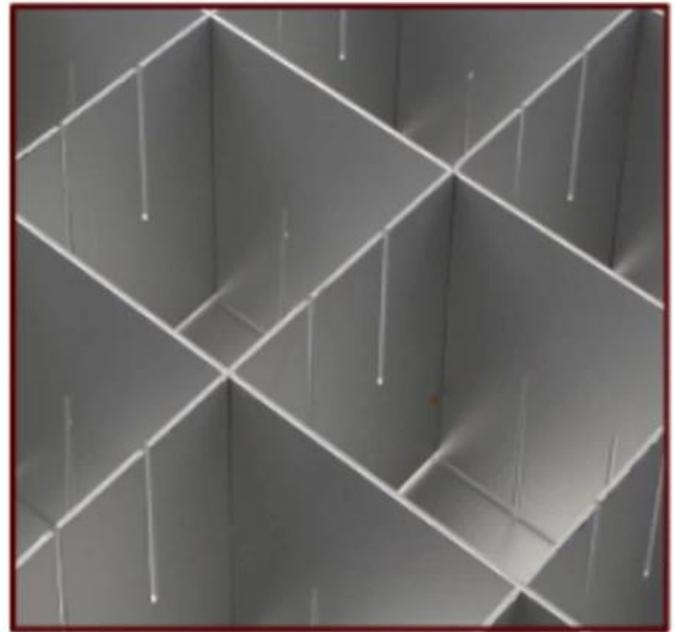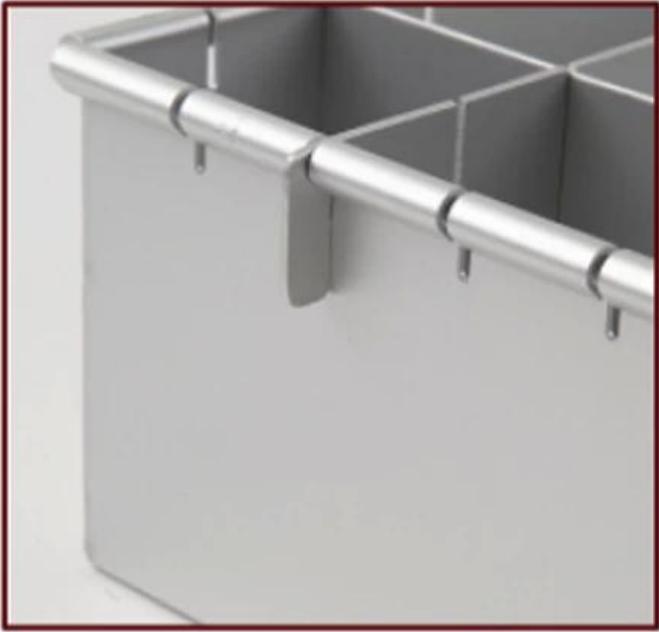

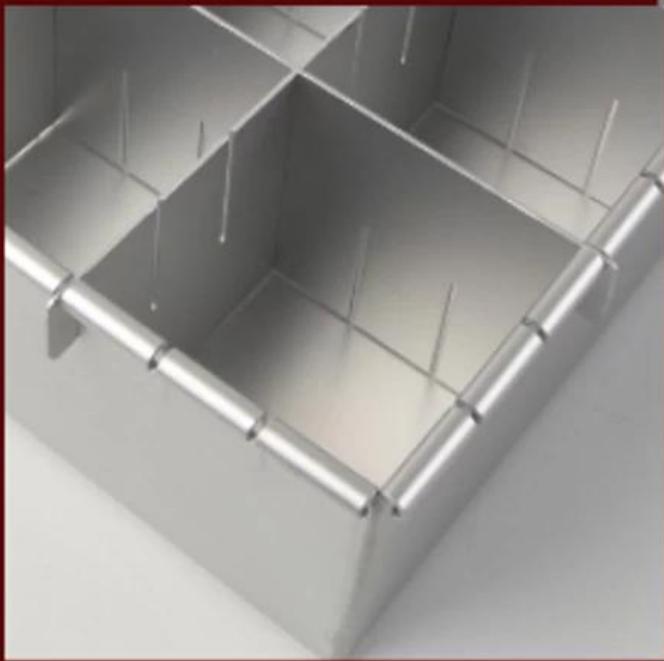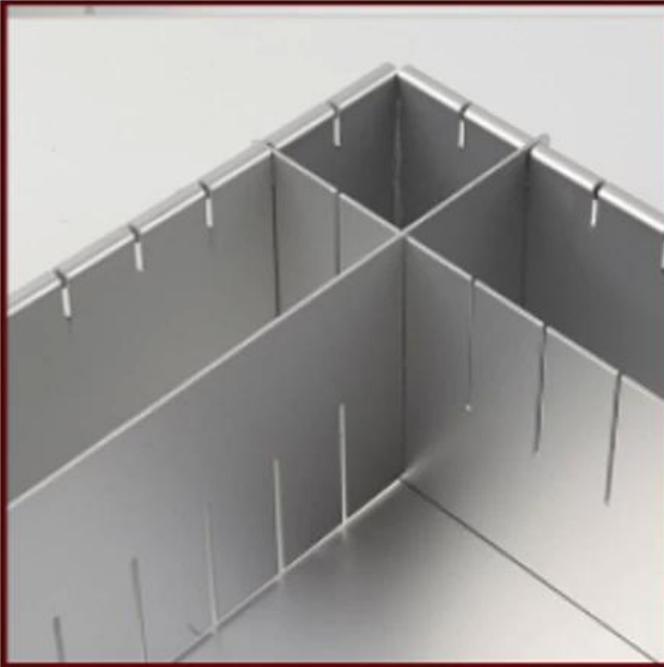

Installation Instructions

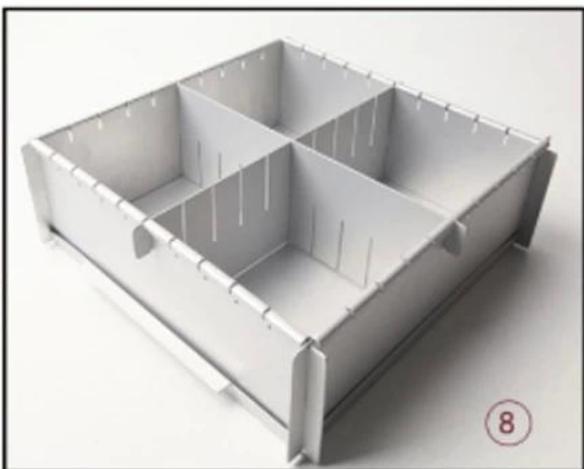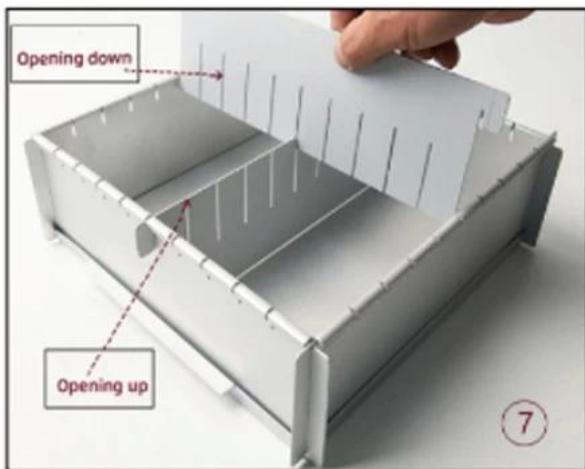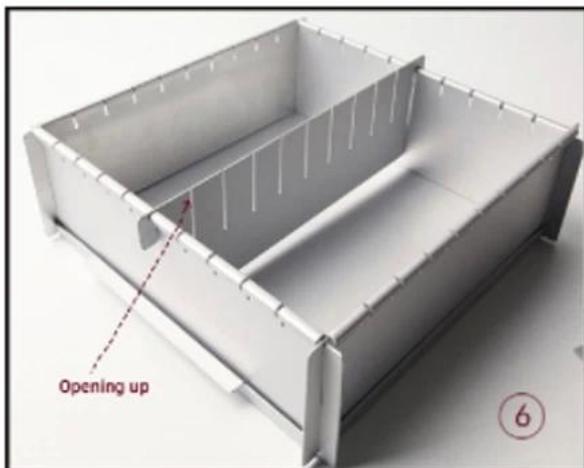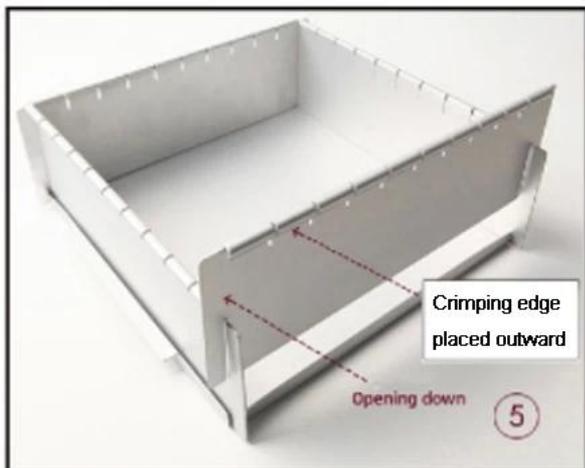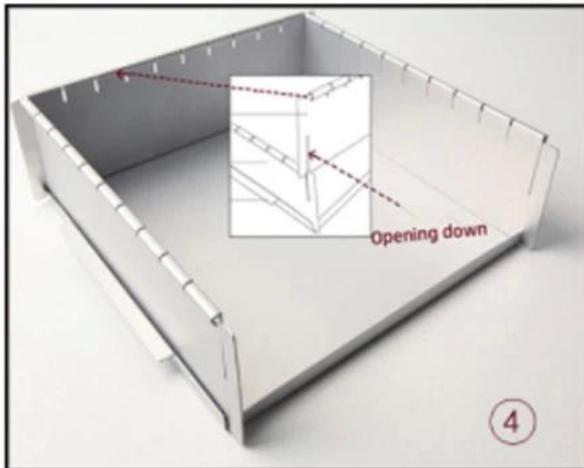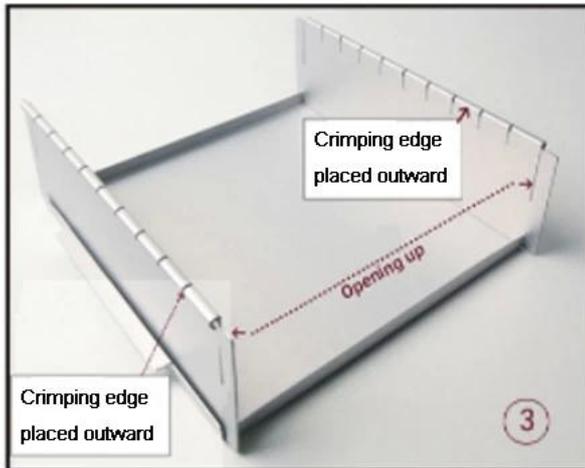



□□□□□

Raw Materials



Punching



Spinning



Tidying



Packing & Marking



2010 ShenzenNewPlanet Industrial Co.,LTD